

# STILLAGE LOADING INSTRUCTIONS

# Tempus<sup>®</sup>

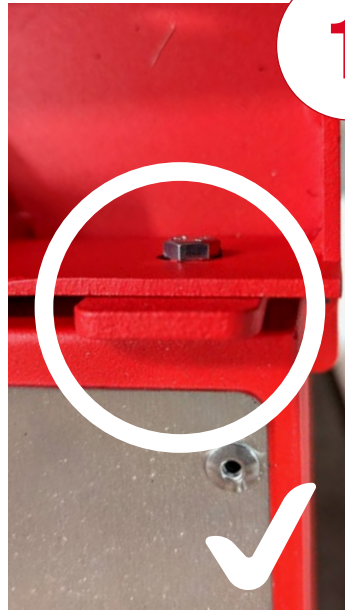
TEMPORARY FIRE DOORS



halo  
assist

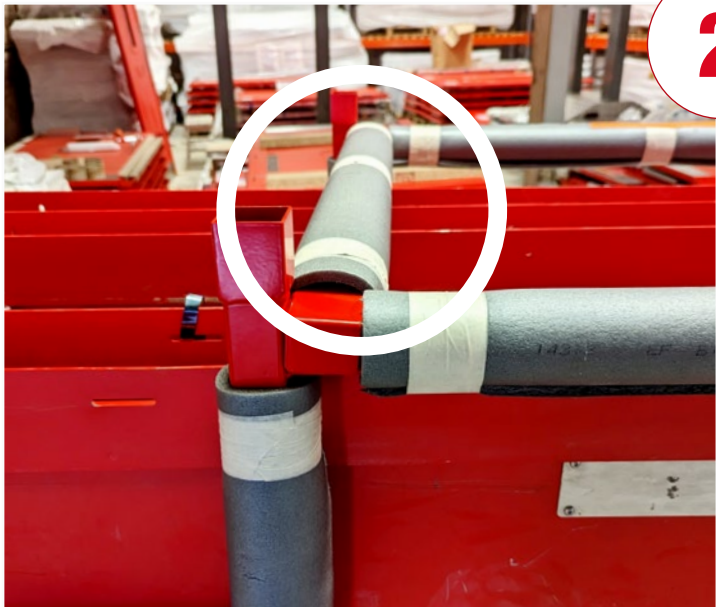
Installation supportline:  
**call 020 3880 0339**

**STEP-BY-STEP GUIDANCE**

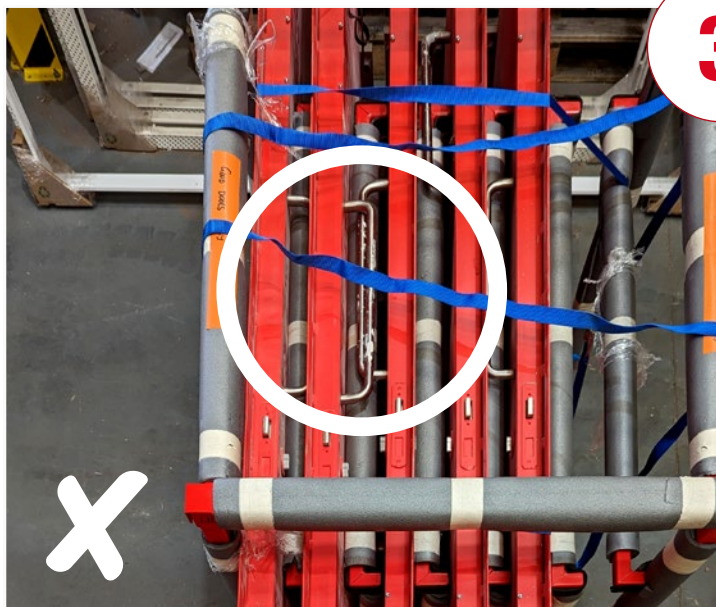
**1****CHECK TRAVEL BOLTS**

Prepare the doors following the decommissioning instructions particularly ensuring that **Travel Bolts** and packers are correctly fitted between the door and frame, (not on the outside of frame).

**Do not stack Tempus doors on top of each other**, the weight can easily bend doors.

**2****PREPARE STILLAGE FOR LOADING**

For convenience the **Bracing Arms** can be removed while loading but must be in place during loading, moving and slinging operations.

**3****ORGANISE DOOR HANDING**

To ensure that **Handles do not clash** (as shown) it is important to separate Left-handed doors from Right-handed.

For handing of Tempus, stand in the door frame with your back to the hinges and handing is the direction the door swings.



## 4

## LIFT DOORS ONTO STILLAGE



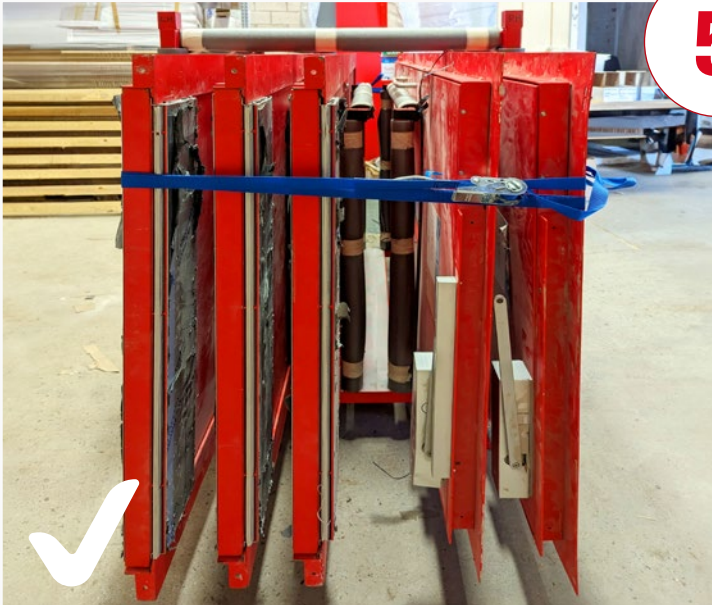
Doors should always be loaded as shown:

- › **Hinges down** with handles at the top
- › Load onto stillage **bottom of door first**
- › Left Hand doors on one side (**LH**)
- › Right Hand doors on the other (**RH**)

Once the doors are loaded the **Bracing Arms** can be replaced if they were removed for loading.

## 5

## SECURE WITH STRAPS



The supplied **Straps** are to be secured around the doors as shown to prevent them sliding.

They should be tight but **do not over-tighten** as it can deform or twist the doors.

# CONGRATULATIONS LOADING IS NOW COMPLETE

Please follow your organisation's procedures for safe lifting, loading and slinging of loads for the movement of stillages.

Rev 10 - July 2023  
SEL-PRT-01096