# Rida

# **Value Riser Doors**



Rev 2.1 - December 2023 | SEL-PRT-01384

# **Operation & Maintenance**


All Rida riser door sets come with a lifetime technical help service. Please call for any further information 020 3880 0339.

### **Operation**

Selo Rida doorsets either have a 3 point lock operated by a square key or a 3 point lock secured by a keyed euro cylinder.

The 3 point lock (on its own) only requires the square key to gain access. The combined 3 point lock and euro cylinder requires the key to be turned in the euro cylinder first, which will in-turn allow you to operate the 3 point lock with the square key and unlock the door.

The pivot pin lever must be 'locked' into the horizontal slot after installation of the doors for normal operation and to prevent incorrect installation. *Fig.*1

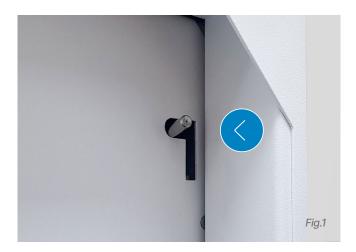

#### COSHH

Rida riser door systems do not require COSHH information as they are manufactured from steel, with no hazardous materials.

#### **Cleaning**

We recommend using a soft damp cloth with mild detergent on the powder coated finished doors. Do not use abrasive cleaners.

#### **Maintenance**

The Selo Rida doorsets are a low maintenance unit. The parts to check on a regular basis are:

#### 1. Lock

Ensure the lock operation is smooth and lubricated. If required use a small spray of light oil (e.g. WD40). *Fig.*2

#### 2. Fixings

Check the locking bolts holding the locking bars to the lock to ensure they are properly tightened. *Fig.*3

# 3. Seals

Check seals are correctly position and not broken.

Door components can be replaced if damaged, please contact **support@selo-uk.com** to request these.





#### **Fire Rated Doors IMPORTANT**

Fire doors should be checked every **6 months minimum.** As the Rida is a locked fire door, ideally it should be checked more regularly, determined by the building fire plan.